

Gas Monitor

Belimo gas monitors are factory calibrated and can monitor up to two gases simultaneously. All monitors feature audible and visual alarms, and CAN bus communication, allowing for standalone operation and networking of up to 32 devices. Select models feature relays and analog outputs to control ventilation directly, as well as BACnet MS/TP allowing for integration into a BMS. All gas monitors are wired via a daisy chain and are backed by a five-year warranty.



5-year warranty


Type Overview

Type	Measured values	Number of relays	Output signal active gas	Communication
22G15-5A5	CO ₂	1	2x AO	CAN bus, BACnet MS/TP
22G15-5B5	CO ₂	2	-	CAN bus, BACnet MS/TP

Technical data


Electrical Data	Nominal voltage	AC/DC 24 V
	Nominal voltage frequency	50/60 Hz
	Power consumption AC	5 VA
	Power consumption DC	2 W
	Cable entry	2 top, 2 bottom, 1 rear – 1/2" EMT
	Cable specification	Power cable: 18...20 AWG Communication cable: 24 AWG twisted shielded pair, low capacitance
	Fuse	Thermal PTC, auto-reset
Data bus communication	Communication	CAN bus BACnet MS/TP
Functional Data	Sensor Technology	Dual channel auto calibration Infrared
	Application	air
	Output signal active note	Analog outputs (2), 2...10 V or 4...20 mA, user selectable with jumper
	Output signal relay note	Relays (1 or 2) SPDT, 5A @ AC 125 V, non-inductive
	Mounting	Install between 3 ft [1 m] from the floor to half of the ceiling height
	Max. altitude	6562 ft [2000 m] above sea level
	Max. altitude note	Calibration verification is recommended above 610 m [2000 ft]

Functional Data	Coverage area	Radius: 15 m [50 ft] Area: 700 m ² [7500 ft ²] There can be no obstructions such as walls, stairs, elevators, shelving with solid fill, tool chests, etc.
	Display	LCD With backlight Gas type, gas concentration, alarm level status
	Response time	105 s (T90)
	Alarm	Audible alarm Built-in white strobe for level 3
	Warm-up time	10 minutes
	Measuring Data	Measured values
Measuring range gas		0...5000 ppm
Calibration		Sensor modules are recommended to be calibrated annually.
Materials	Housing	UL94 5VA
Safety Data	UL Approval	cCSAus listed to C22.2 No. 61010-1-12, UL Std. No. 61010-1 (3rd Edition), harmonized under IEC/EN 61010-1 BTL listed No. BTL-30001
	Pollution degree	2
	Ambient humidity	15...90% RH continuous, 0...99% RH intermittent, non-condensing
	Ambient temperature	-20...40°C [-4...104°F]


Accessories

	Description	Type
Spare parts	Sensor module CO ₂ (Carbon Dioxide), 0...5000 ppm, Dual channel auto calibration	R-G15-005
Communication module	Description	Type
	Communication module, CAN bus, BACnet MS/TP, 1 SPDT Relay, 2 Analog Outputs	C-22G-5A
	Communication module, CAN bus, BACnet MS/TP, 2 SPDT Relays	C-22G-5B
Electrical accessories	Communication module, CAN bus	C-22G-5C
	Description	Type
Mechanical accessories	Audible alarm	A-22G-A16
	Description	Type
	Splash proof enclosure, Wall mount	A-22G-A12
Duct mount enclosure, Duct mount	A-22G-A13	


22G..-5A / C-22G-5A

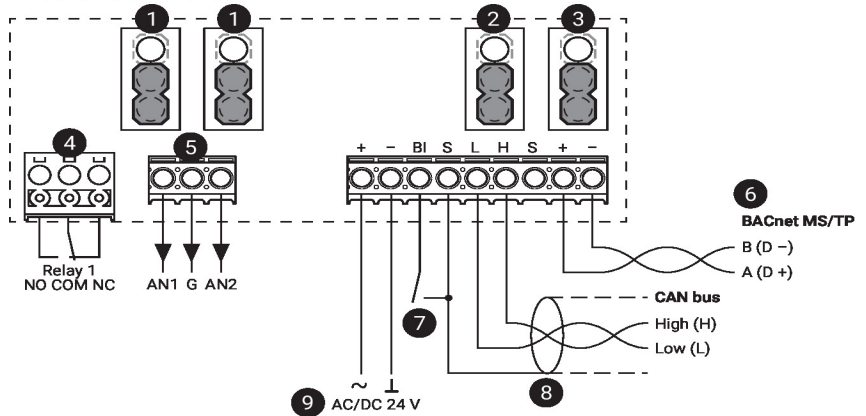

22G..-5B / C-22G-5B

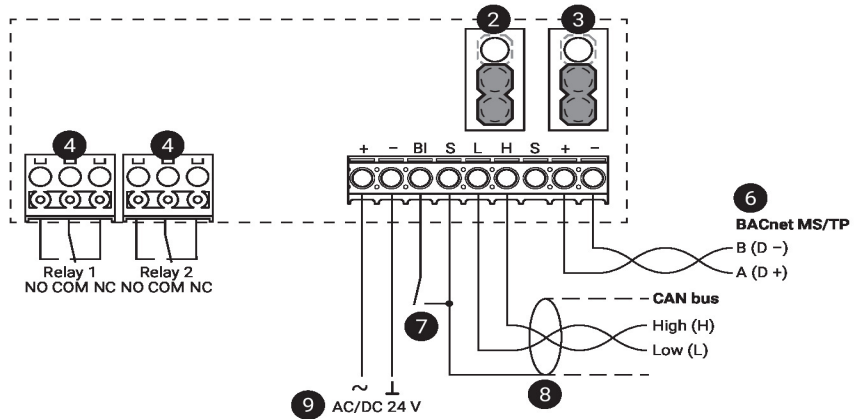


22G..-5C / C-22G-5C

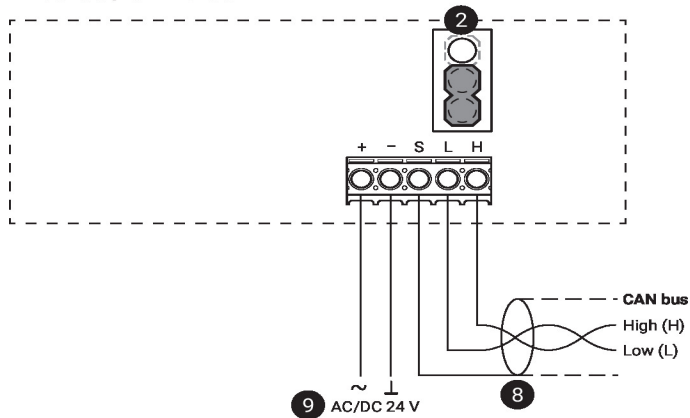


- 1 Analog outputs
Down position: 2...10 V (factory setting)
Up position: 4...20 mA
- 2 End of line (EOL) jumper: CAN bus
Down position: Termination OFF (factory setting)
Up position: Termination ON (first and last unit only should have this jumper in the up position)
- 3 End of line (EOL) jumper: BACnet MS/TP
Down position: Termination OFF (factory setting)
Up position: Termination ON (first and last unit only should have this jumper in the up position)
- 4 Relay output
- 5 Analog output
- 6 Shield connected at the first unit only, at others only looped through
- 7 Binary input to limit switch
- 8 Shield connected at the first unit only, at others only looped through
- 9 No connection to the ground

Wiring CAN bus CAN bus

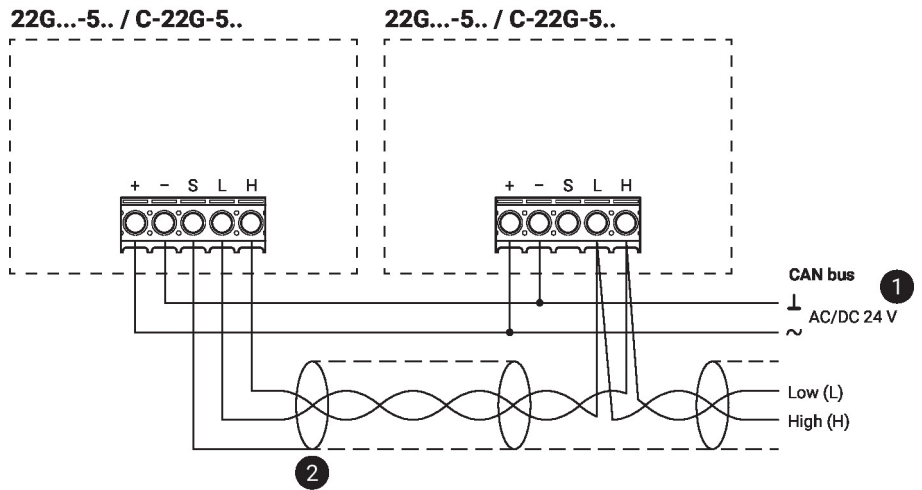


- 1 No connection to the ground
- 2 Shield connected at the first unit only, at others only looped through

Wiring RS485 BACnet MS/TP

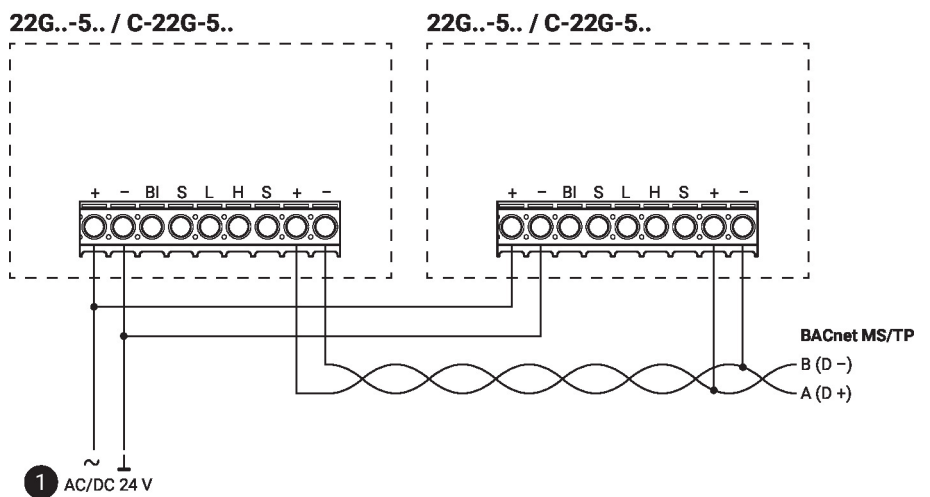

Dimensions

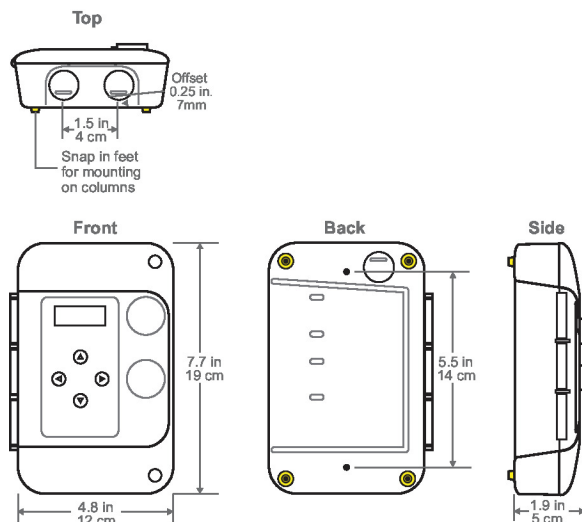

Type	Weight
22G15-5A5	0.95 lb [0.43 kg]

Type

22G15-5B5

Weight

0.95 lb [0.43 kg]

Further documentation

- Installation instructions
- Operating instructions