

**Clamps / Position Indicators / Rotation Limiters**

**K7-2 US** Standard Clamp. Fits shafts 1/2" to 1.05".



**IND-AFB** Damper Position Indicator.  
For damper position indication in short shaft installations



**Shaft Adaptors / Extensions**

**AV8-25** Shaft Extension. For damper operating shafts.  
Approx. 6-5/8" [170 mm] extension for shafts  
1/4" to 3/4" [6 to 20 mm].




The shaft adaptors listed below may be used with AFB, AFX, NFB, NFX actuators.  
For more information see page 410.

**ZG-JSA-1 ZG-JSA-2 ZG-JSA-3**

**Non-Direct Mounting**

**ZG-AFB** Crank Arm Adaptor Kit  
For more information see page 401.

**ZG-AFB118** Crank Arm Adaptor Kit  
For more information see page 396.

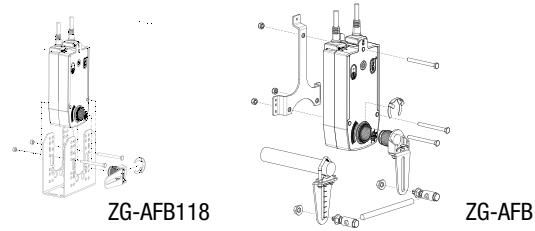

**KH-AFB** Crank Arm  
Fits round shafts up to 3/4".



**Mounting Brackets**

The mounting brackets listed below may be used with AFB, AFX, NFB, NFX actuators.  
For more information see pages 395, 396 and 405.

**ZG-100 ZG-101 ZG-102 ZG-118**

**Housings**


The housings listed below may be used with AF/NF actuators.  
For more information see pages 411 to 415.

**ZS-100 ZS-150 ZS-260 ZS-300**

**Miscellaneous**

**AF-P** Anti-Rotation T-Bracket for AF/NF.

**Z-AF** AF, NF to AFB, AFX, NFB, NFX Retrofit Mounting Bracket

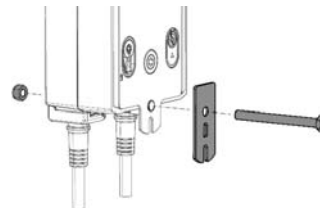

M40024 - 05/10 - Subject to change. © Belimo Aircontrols (USA), Inc.