

WEATHER SHIELDS		VALVES	GM	2* GM	GR/GKR	LF	NF	AF	2* AF	GK	2* GK	LV/SV	EV/RV	LVK/SVK	AVK	
	<b>ZS-SPGV-60</b> For LF actuators on NPT series	Globe Valves				•										
	<b>ZS-SPGV-10</b> For dual AF series actuators on flanged globe valves								•							
	<b>ZS-SPGV-20</b> For single NF, AF actuator series						•		•							
	<b>ZS-SPGV-40</b> For GM, GK series on flanged globe valves		•								•					
	<b>ZS-SPGV-50</b> For dual GM, GK series on flanged globe valves			•								•				
	<b>ZS-GV-001</b> For LV, SV actuators on NPT series												•		•	
	<b>ZS-GV-002</b> For EV, RV, AVK actuator on flanged series													•		•
	<b>ZS-BFV-20**</b> For GM, GK actuators on F6, F7, HD, HDU, SHP, and VIC series		•									•				
	<b>ZS-BFV-30**</b> For AF actuators on F6, F7, HD, HDU SHP, and VIC series								•							
	<b>ZS-BFV-60**</b> For dual GM, GK actuators on butterfly valves F6, HD, HDU (4...6"), SHP, and VIC series			•								•				
	<b>ZS-BFV-70**</b> For dual AF series on butterfly valves F6, HD, HDU (2½...3"), SHP and VIC series								•							
	<b>ZS-BFV-90**</b> For dual AF, single/dual GM, GK on F7 series (2...4"). No holes unless factory mounted	•	•						•	•	•					
	<b>ZS-BFV-100**</b> Dual GM/GK series for F7, HD, HDU, SHP (4...6"). <b>Two required</b>		•								•					
	<b>ZS-BFV-110</b> GR, GKR series for F6, HD, HDU (4...6")			•												

\*\*Cannot be used with direct mount actuators.

